

AKAI

DJ-Y5L

PROFESSIONAL PARTY SPEAKER



DUAL SYSTEM



BT
COMPATIBLE



AUX IN
Port



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

Safety Precautions

Warning: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFEGUARDS

Caution: Please carefully read all of the following important safeguards to ensure safe operation.

1. Read Instructions:

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions:

The safety and operating instructions should be retained for future reference.

3. Follow Instructions:

All operating instructions should be followed.

4. Heed Warnings:

All warnings on the unit and the operating instructions should be adhered to.

5. Power Source:

The appliance should be connected based on instructions.

6. Heat:

Keep the unit away from heat sources such as radiators, refrigerators, stoves or other appliances that may radiate heat.


7. Non-use Periods:

The power cord of the unit should be unplugged from the outlet when you do not use it for a long time.


8. Damage requiring service:

The unit should be repaired by qualified service personnel in the following cases:

- a. The power plug or cable has been damaged;
- b. Objects have fallen or liquid has been spilled on the appliance;
- c. The appliance has been exposed to rain;
- d. The appliance is functioning abnormally.

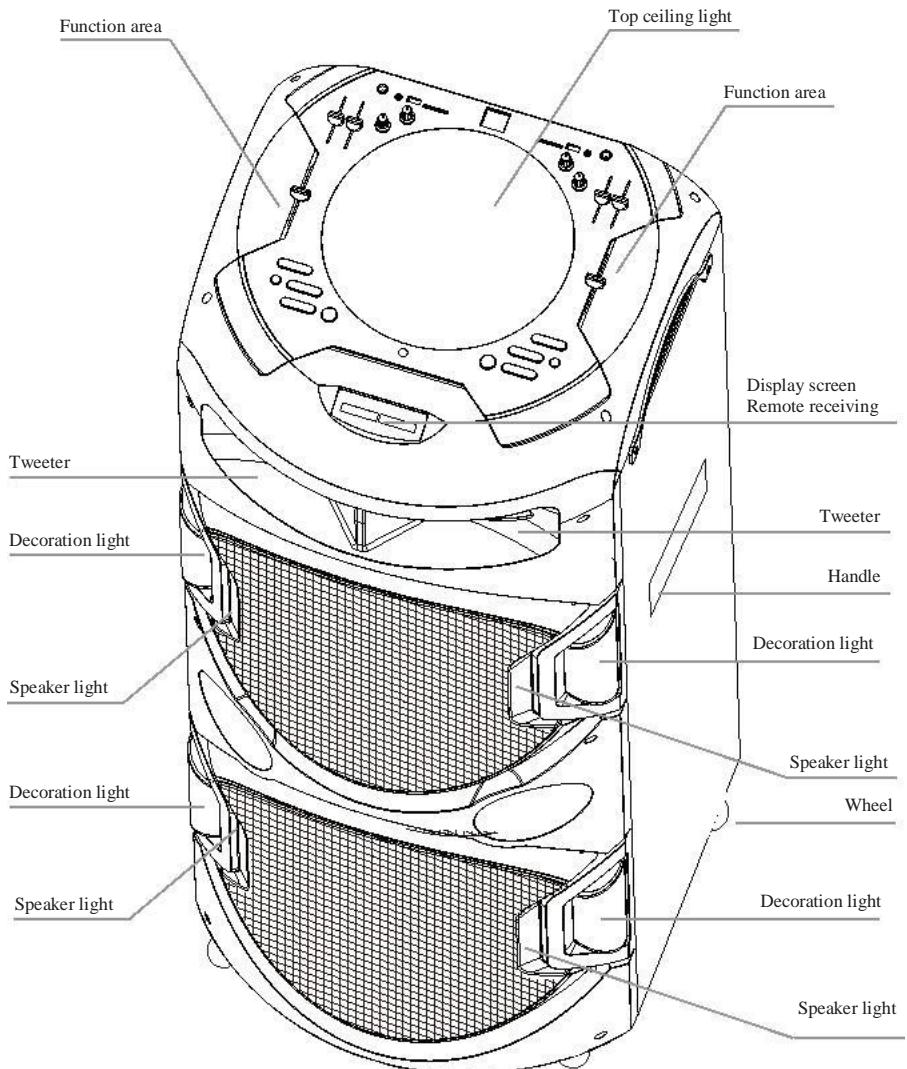

CONNECTIONS

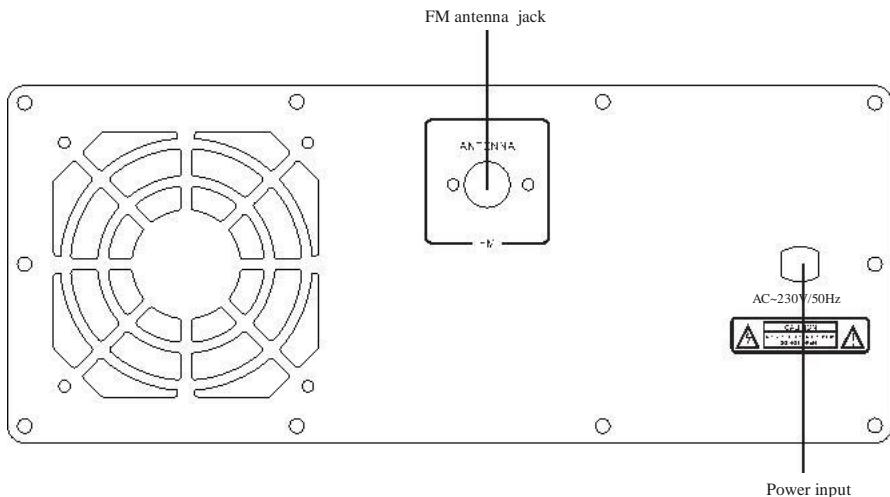

Accessories



REMOTE CONTROL



INSTRUCTION
MANUAL



FM ANTENNA




AUDIO CABLE



WIRELESS MICROPHONE


FRONT PANEL-CONTROLS AND FUNCTIONS

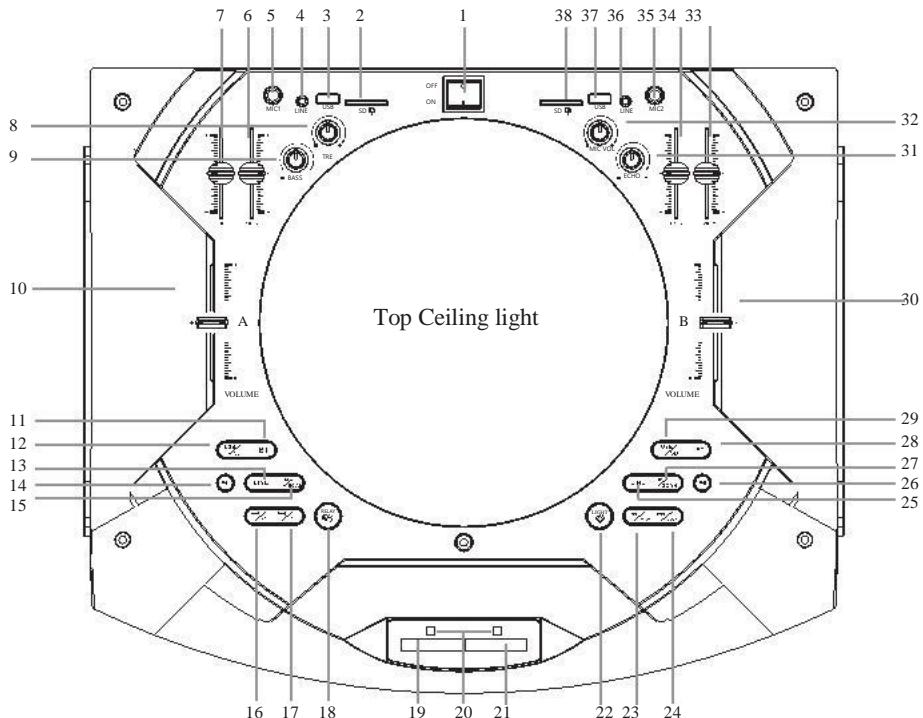

- 1.Power ON/OFF
- 2.A System SD card input slot
- 3.A System USB input slot
- 4.A System Line input slot
- 5.Microphone 1 input slot
- 6.1KHz Equalizer
- 7.63Hz Equalizer
- 8.Treble increase/weakers
- 9.BASS increase/weakers
- 10.A System Volume control
- 11.A System BT input key
(BT searching name: DJ-Y5L A)
- 12.A System USB/SD card input key
- 13.A System Line input key
- 14.A System Play/Pause key
- 15.A System FM input key
/long press for FM auto scan
- 16.A System Previous key,
long press for volume decrease
- 17.A System next key,
long press for volume increase
- 18.Mute of whole unit
- 19.A System LED display

- 20.Remote control receiver
- 21.B System LED display
- 22.LED switch ON/OFF:
Unit power is ON all lights ON
1st press: Top Ceiling light OFF / Speaker Light & Decoration LED ON
2nd press: Top Ceiling light ON / Speaker Light & Decoration LED OFF
3rd Press: All Lights OFF
4th Press: All Lights ON
Rotate Operation
- 23.B System Previous key, long press for volume decrease
- 24.B System next key, long press for volume increase
- 25.B System Line input slot
- 26.B System Play/Pause key
- 27.B System FM input key
/long press for FM auto scan
- 28.B System BT input key
(BT searching name: DJ-Y5L B)
- 29.B System USB/SD card input key
- 30.B System Volume control
- 31.ECHO increase/weakers
- 32.Micprahone Volume increase/weakers
- 33.12KHz Equalizer
- 34.6KHz Equalizer
- 35.Microphone 2 input slot
- 36.B System Line input slot
- 37.B System USB input slot
- 38.B System SD card input slot

REMOTE INSTRUCTION

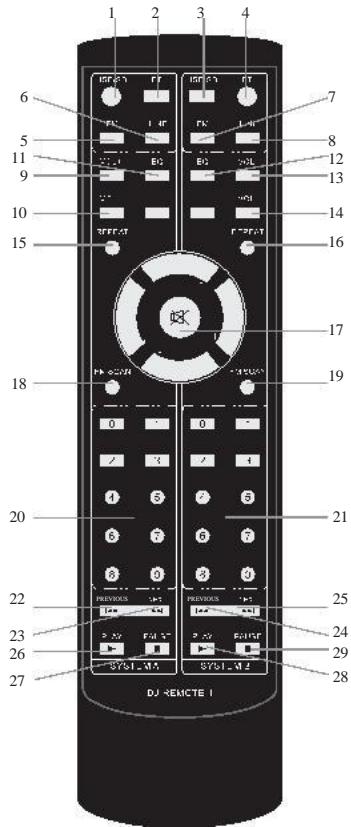


1. A System USB/SD card input button
2. A System BT input button
3. B System USB/SD card input button
4. B System BT input button
5. A System FM input button
6. A System LINE input button
7. B System FM input button
8. B System LINE input button
9. A System volume increase
10. A System volume decrease
11. A System Equalizer
12. B System Equalizer
13. B System volume increase
14. B System volume decrease
15. A System play again
16. B System play again
17. Mute volume
18. A System auto scan for channels
19. B System auto scan for channels
20. A System USB/SD card song select
21. B System USB/SD card song select
22. A System previous song
23. A System next song
24. B System previous song
25. B System next song
26. A System play
27. A System Pause
28. B System play
29. B System Pause

Dual Bluetooth Speaker



SYSTEM A

SYSTEM B

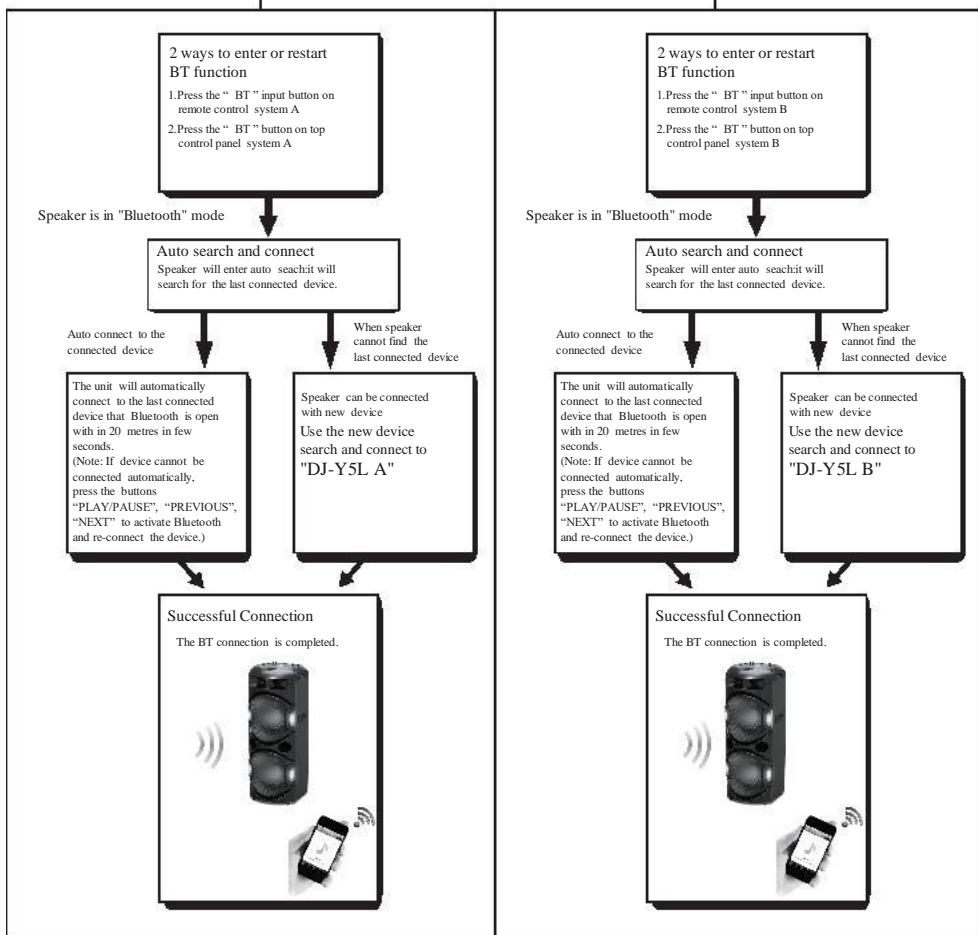

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. In this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health. To find your nearest collection center:

- Contact local authorities
- Access the website: www.mmediu.ro
- Request additional information from the store where you purchased the product.

AKAI

DJ-Y5L

BOXA PROFESIONALA



DUAL SYSTEM



COMPATIBLE



AUX IN
Port



ATENTIE

RISC DE ELECTROCUTARE
NU DESCHIDETI



Semnul fulgerului cu sageata, intr-un triunghi echilateral atentioneaza utilizatorul despre prezena "voltajului periculos neizolat" in interiorul produsului, care poate fi de o putere suficient de mare pentru a constitui risc de electrocutare pentru o persoana.

Semnul exclamarii in interiorul unui triunghi echilateral este folosit pentru a avertiza utilizatorul despre prezena unor instructiuni importante de operare si intretinere in literatura care insoteste acest produs.


Masuri de precautie

Atentie: Pentru a preveni incendiul sau electrocutarea, nu expuneti aparatul la ploaie sau umezeala.

MASURI DE SIGURANTA IMPORTANTE


Atentie: Va rugam sa cititi cu atentia toate masurile de precautie importante pentru a asigura operarea aparatului in siguranta.

1. Cititi instructiunile:
Toate instructiunile de siguranta si de operare trebuie citite inainte de a pune aparatul in functiune.
2. Retineti instructiunile:
Instructiunile de operare si siguranta trebuie pastrate pentru referinte ulterioare.
3. Urmati instructiunile:
Trebue sa urmati toate instructiunile de operare.
4. Atentionari:
Toate atentionarile aflate pe aparat si in instructiunile de operare trebuie respectate.
5. Alimentarea la curent:
Aparatul trebuie conectat conform instructiunilor.
6. Caldura:
Tineti aparatul departe de sursele de caldura, cum ar fi radiatoare, frigidere, sobe sau alte aparate care pot radia caldura.
7. Perioade de inactivitate:
Cablul de alimentare al aparatului trebuie scos din priza atunci cand nu folositi aparatul o perioada indelungata de timp.
8. Defecte care necesita service:
Unitatea trebuie reparata de personal calificat de service, in urmatoarele cazuri:
 - a. Cablul de alimentare sau mufa sunt defecte;
 - b. Pe aparat au cazut obiecte sau s-a varsat lichid;
 - c. Aparatul a fost expus la ploaie;
 - d. Aparatul nu functioneaza corespunzator.

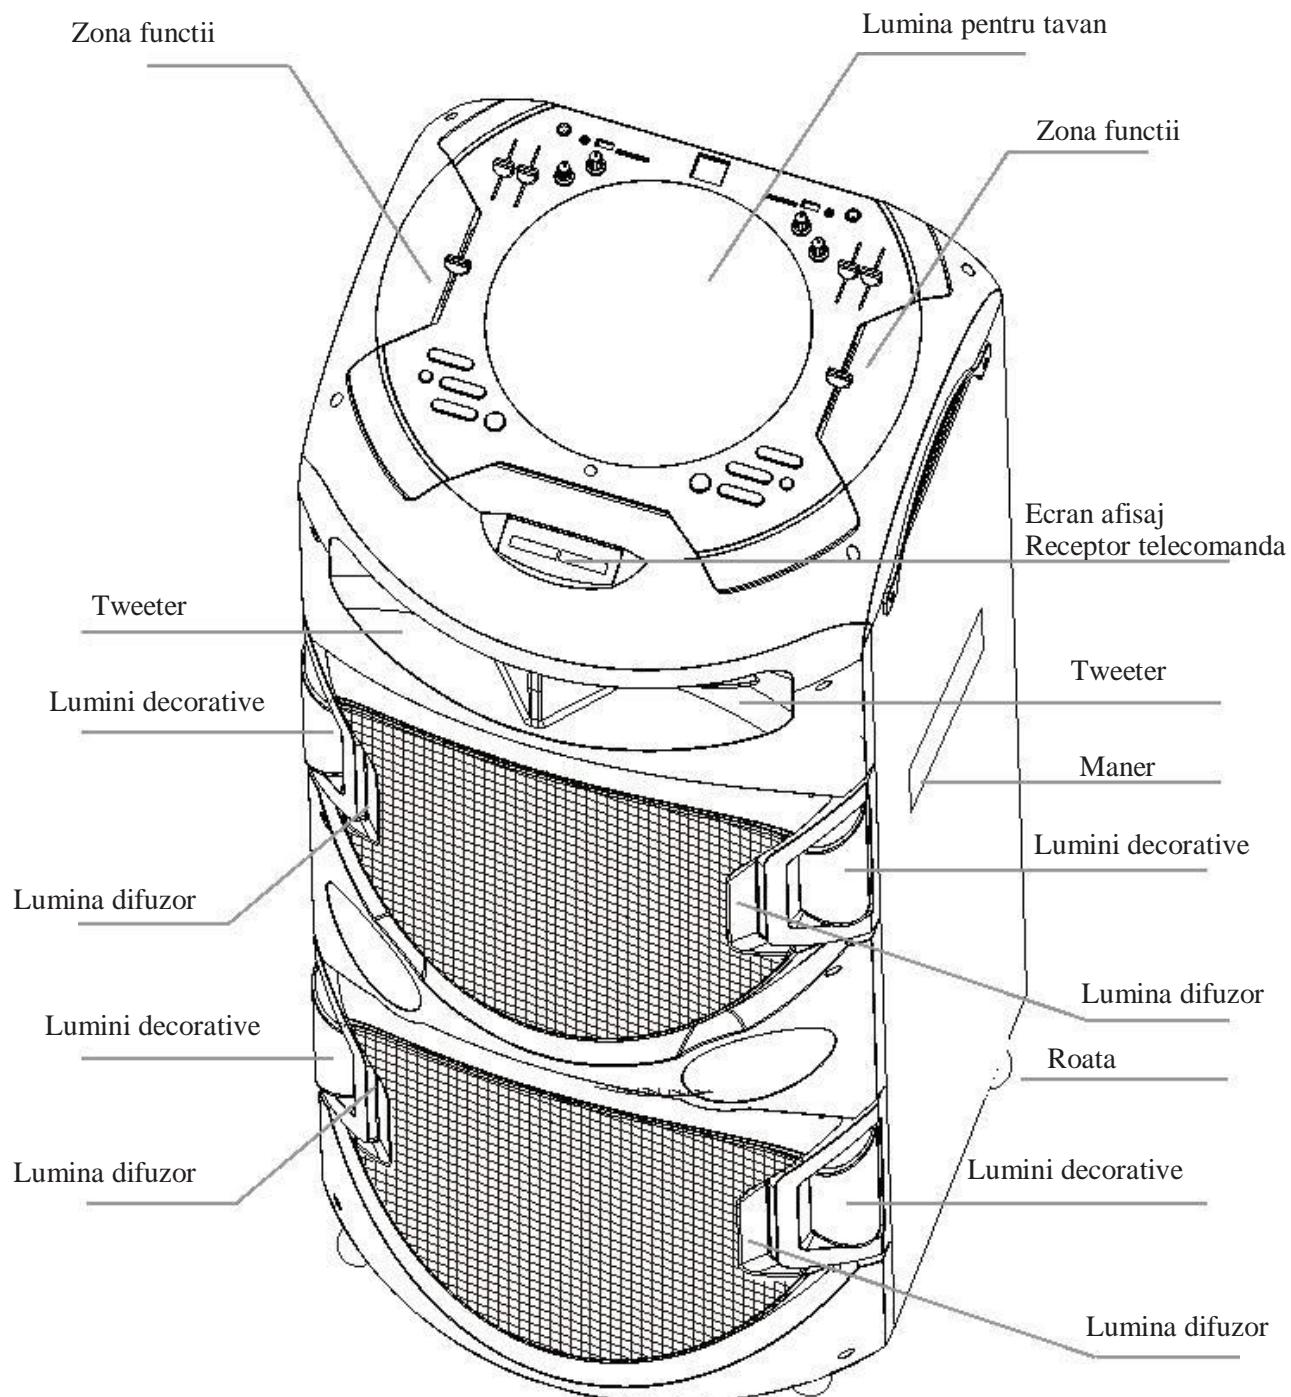

CONEXIUNI

Mufa antena FM

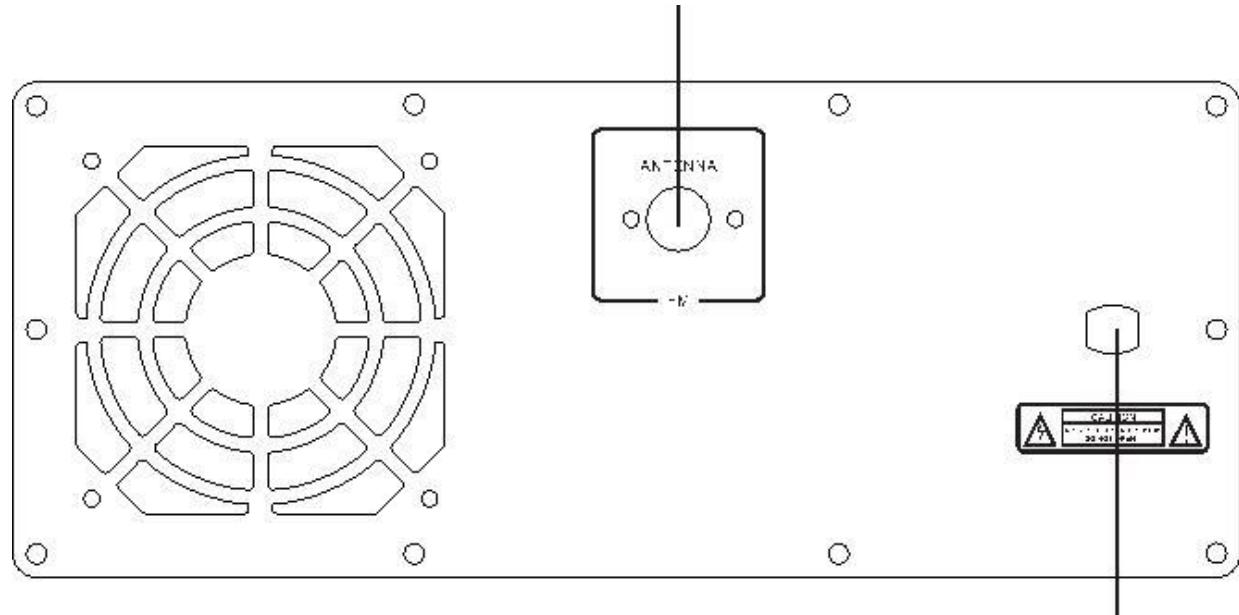


Putere intrare

Accesorii



Telecomanda

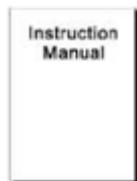

Manual instructiuni



Antena FM




Cablu audio



Microfon wireless


PANOU FRONTAL - BUTOANE CONTROL SI FUNCTII

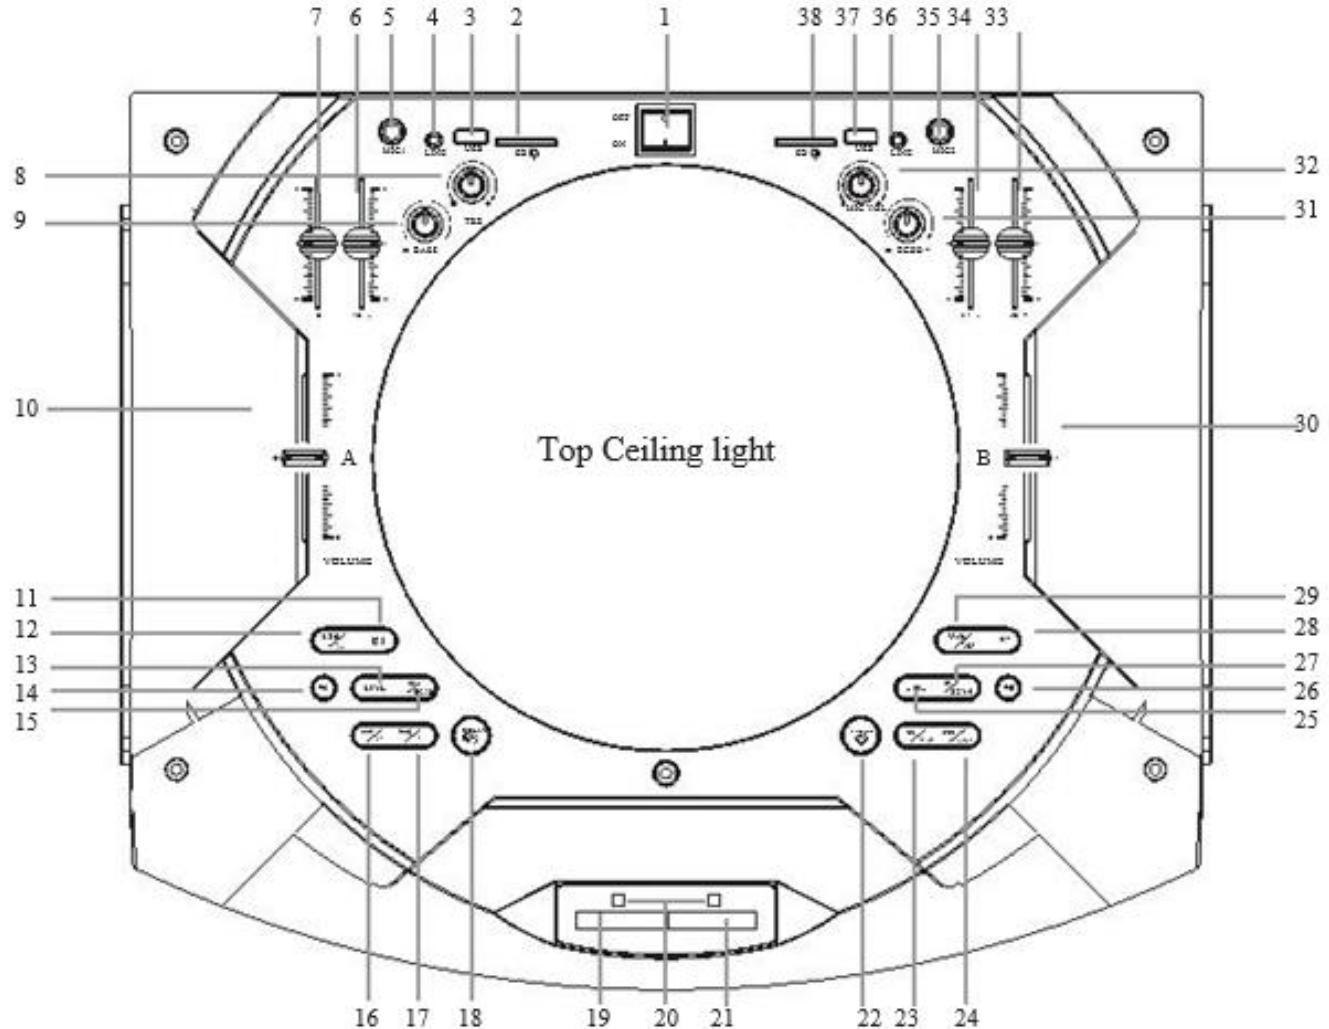

1.	PORNIRE/OPRIRE alimentare	20.	Receptor telecomanda
2.	Sistem A – slot intrare card SD	21.	Sistem B – afisaj LED
3.	Sistem A – slot intrare USB	22.	Buton LED PORNIRE/OPRIRE: Alimentarea aparatului este pornita, toate luminiile sunt pornite
4.	Sistemul A – slot intrare Line		Prima apasare: lumini tavan OPRITE/lumini difuzor & LED decorativ PORNITE
5.	Slot intrare microfon 1		A doua apasare: lumini tavan PORNITE/lumini difuzor & LED decorativ OPRITE
6.	Egalizator 1KHz		A treia apasare: Toate luminiile OPRITE
7.	Egalizator 63Hz		A patra apasare: Toate luminiile PORNITE
8.	Marire/micsorare inalte		Repetare operatii
9.	Marire/micsorare BASS		
10.	Sistem A – control volum	23.	Sistem B – buton anterior, apasati lung pentru micsorarea volumului

11.	Sistem A – buton intrare BT (nume cautare BT: DJ-BY4L A)		24.	Sistem B – buton urmator, apasati lung pentru micsorarea volumului
12.	Sistem A – buton intrare card SD/USB		25.	Sistem B – buton urmator, apasati lung pentru marirea volumului
13.	Sistem A – buton intrare Line		26.	Sistem B – buton redare/pauza
14.	Sistem A – buton Redare/Pauza		27.	Sistem B – buton intrare FM/apasati lung pentru scanare FM automata
15.	Sistem A – buton intrare FM		28.	Sistem B – buton intrare BT (nume cautare BT: DJ-BY4L B)
16.	Sistem A – buton anterior, apasati lung pentru micsorarea volumului		29.	Sistem B – buton intrare card SD/USB
17.	Sistem A – buton urmator, apasati lung pentru marirea volumului		30.	Sistem B – control volum
18.	Oprirea volumului pentru intregul aparat		31.	Marire/micsorare ECHO
19.	Sistem A – afisaj LED		32.	Marire/micsorare volum microfon
			33.	Egalizator 12KHz
			34.	Egalizator 6KHz
			35.	2 intrari microfon
			36.	Sistem B – slot intrare Line
			37.	Sistem B – slot intrare USB
			38.	Sistem B – slot intrarecard SD

INSTRUCTIUNI TELECOMANDA

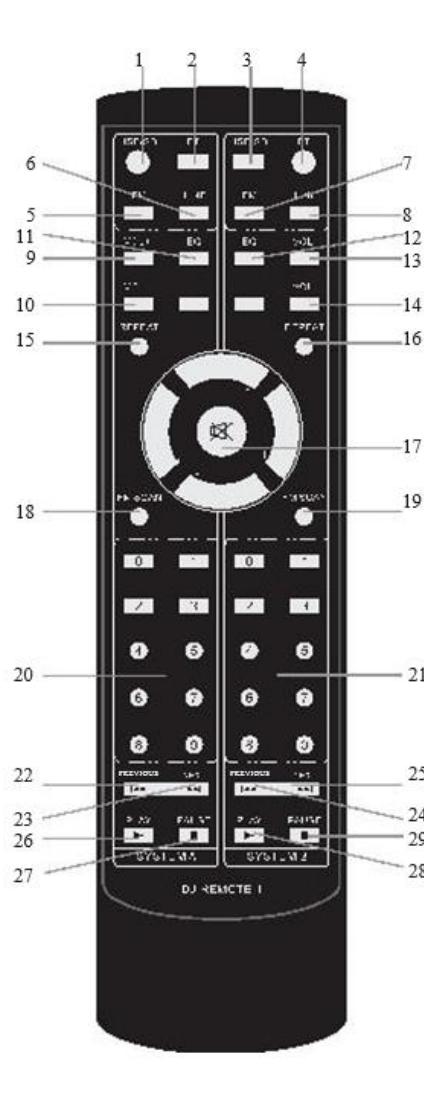	<ol style="list-style-type: none">1. Sistem A – buton intrare card SD/USB2. Sistem A – buton intrare BT3. Sistem B – buton intrare card SD/USB4. Sistem B – buton intrare BT5. Sistem A – buton intrare FM6. Sistem A – buton intrare LINE7. Sistem B – buton intrare FM8. Sistem B – buton intrare LINE9. Sistem A – marire volum10. Sistem A – micsorare volum11. Sistem A – egalizator12. Sistem B – egalizator13. Sistem B – marire volum14. Sistem B – micsorare volum15. Sistem A – reluare redare16. Sistem B – reluare redare17. Opreire volum18. Sistem A – scanare automata canale19. Sistem B - scanare automata canale20. Sistem A – selectare melodie card SD/USB21. Sistem B – selectare melodie card SD/USB22. Sistem B – melodia anterioara23. Sistem A – melodia urmatoare24. Sistem B – melodia anterioara25. Sistem B – melodia urmatoare26. Sistem A – redare27. Sistem A – pauza28. Sistem B – redare29. Sistem B - pauza
--	--

UTILIZAREA CONEXIUNI BLUETOOTH

BOXA DUALA CU BLUETOOTH



SISTEM A

2 cai de intrare sau repornire a functiei BT
1. Apasati butonul "BT" de pe telecomanda pentru sistemul A
2. Apasati butonul "BT" de pe panou superior al sistemului A

Boxa este in modul "Bluetooth"

Cautare automata si conectare
Boxa intra in cautarea automata:
va cauta ultimul dispozitiv conectat.

Conecțare automată la dispozitivul conectat

Aparatul se va conecta automat, in cateva secunde, la ultimul dispozitiv BT care este deschis in raza de 20m.
(Nota: Daca aparatul nu poate fi conectat automat, apasati butoanele "PLAY/PAUSE", "PREVIOUS", "NEXT" pentru a activa BT si a reconecta dipozitivul.)

Boxa poate fi conectata la dispozitivul nou
Folositi noul dispozitiv pentru cautare si conectare la "DJ-BY4L A"

Conecțare efectuata cu succes
Conecțarea la BT este completa.



SISTEM B

2 cai de intrare sau repornire a functiei BT
1. Apasati butonul "BT" de pe telecomanda pentru sistemul B
2. Apasati butonul "BT" de pe panou superior al sistemului B

Boxa este in modul "Bluetooth"

Cautare automata si conectare
Boxa intra in cautarea automata:
va cauta ultimul dispozitiv conectat.

Conecțare automată la dispozitivul conectat

Aparatul se va conecta automat, in cateva secunde, la ultimul dispozitiv BT care este deschis in raza de 20m.
(Nota: Daca aparatul nu poate fi conectat automat, apasati butoanele "PLAY/PAUSE", "PREVIOUS", "NEXT" pentru a activa BT si a reconecta dipozitivul.)

Cand boxa nu poate gasi ultimul dispozitiv conectat

Boxa poate fi conectata la dispozitivul nou
Folositi noul dispozitiv pentru cautare si conectare la "DJ-BY4L A"

Conecțare efectuata cu succes
Conecțarea la BT este completa.



DEZAFECTAREA ECHIPAMENTELOR ELECTRICE ȘI ELECTRONICE UZATE



Acest simbol prezent pe produs sau pe ambalaj semnifică faptul că produsul respectiv nu trebuie tratat ca un deșeu menajer obișnuit. Nu aruncați aparatul la gunoiul menajer la sfârșitul duratei de funcționare, ci duceți-l la un centru de colectare autorizat pentru reciclare. În acest fel veți ajuta la protejarea mediului înconjurător și veți putea împiedica eventualele consecințe negative pe care le-ar avea asupra mediului înconjurător și veți putea împiedica eventualele consecințe negative pe care le-ar avea asupra sănătății umane.

Pentru a afla adresa celui mai apropiat centru de colectare:

- Contactați autoritățile locale;
- Accesați pagina de internet: www.mmediu.ro;
- Solicitați informații suplimentare de la magazinul de unde ați achiziționat produsul.

AKAI



EU Declaration of Conformity

We, INTERVISION TRADING RO SRL, declare under sole responsibility that the following products:

Brand name: AKAI
Type: PORTABLE SPEAKER
Descriptions: DJ-Y5L
Lot: 1912XXXX

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

EUROPEAN COMMUNITY DIRECTIVE 2014/30/EU

EUROPEAN COMMUNITY DIRECTIVE 2014/35/EU

EUROPEAN COMMUNITY DIRECTIVE 2014/53/EU

EUROPEAN COMMUNITY DIRECTIVE 2011/65/EU

The products are compliant with the following standards:

EN 62368-1:2014+A11:2017

EN 62479:2010

EN 301 489-1 V2.2.1: (2019-03)

EN 301 489-17 V3.2.0: (2017-03)

EN 300 328 V2.2.2: (2019-07)

EN 55032:2015

EN 55035:2017

EN 61000-3-2:2014

EN 61000-3-3:2013+A1:2019

Certificate of Conformity issued based on the Certificates C190826017001 and HK1908162023E issued based on the tests reports C190826017001 and HK1908162023-SR/-1ER/-2ER/-2EH of Eurones (Dongguang) Customer Products Testing Service Co., Ltd. 3/F, Huafeng Building, No. 77, Hetian Avenue, Houjie, Dongguang, Guangdong, China si Shenzhen HUAK Testing Technology Co., Ltd. 1F, B2 Building, Junfeng Zhongcheng Zhizao Innovation Park, Heping Community, Fuhai Street, Bao'an District, Shenzhen, China.

Intervision Trading Ro SRL



Signature: _____

Printed name and Position: CIOBANU DORIN – GENERAL MANAGER

Date: 15th November, 2019

Place: Pitesti, Romania

AKAI



DECLARATIE DE CONFORMITATE UE

Noi, INTERVISION TRADING RO SRL, declaram pe propria raspundere ca urmatoarele produse:

Marca: AKAI
Model: BOXA ACTIVA PORTABILA
Descriere: DJ-Y5L
Lot: 1912XXXX

la care se refera aceasta declaratie, respecta cerintele de protectie cuprinse in urmatoarele standarde si norme de siguranta ale Consiliului Comunitatilor Europene:

EUROPEAN COMMUNITY DIRECTIVE 2014/30/EU

EUROPEAN COMMUNITY DIRECTIVE 2014/35/EU

EUROPEAN COMMUNITY DIRECTIVE 2014/53/EU

EUROPEAN COMMUNITY DIRECTIVE 2011/65/EU

Produsele sunt in conformitate cu urmatoarele standarde:

EN 62368-1:2014+A11:2017

EN 62479:2010

EN 301 489-1 V2.2.1: (2019-03)

EN 301 489-17 V3.2.0: (2017-03)

EN 300 328 V2.2.2: (2019-07)

EN 55032:2015

EN 55035:2017

EN 61000-3-2:2014

EN 61000-3-3:2013+A1:2019

Certificat de conformitate eliberat in baza certificatelor C190826017001 si HK1908162023E, emise in baza rapoartelor de teste C190826017001 si HK1908162023-SR/-1ER/-2ER/-2EH ale Eurones (Dongguang) Customer Products Testing Service Co., Ltd. 3/F, Huafeng Building, No. 77, Hetian Avenue, Houjie, Dongguang, Guangdong, China si Shenzhen HUAK Testing Technology Co., Ltd. 1F, B2 Building, Junfeng Zhongcheng Zhizao Innovation Park, Heping Community, Fuhai Street, Bao'an District, Shenzhen, China.

Pentru si in numele Intervision Trading Ro SRL,

Semnatura: _____

Nume complet si functia: CIOBANU DORIN – DIRECTOR GENERAL

Data: 15 noiembrie 2019

Locul: Pitesti, Romania

