

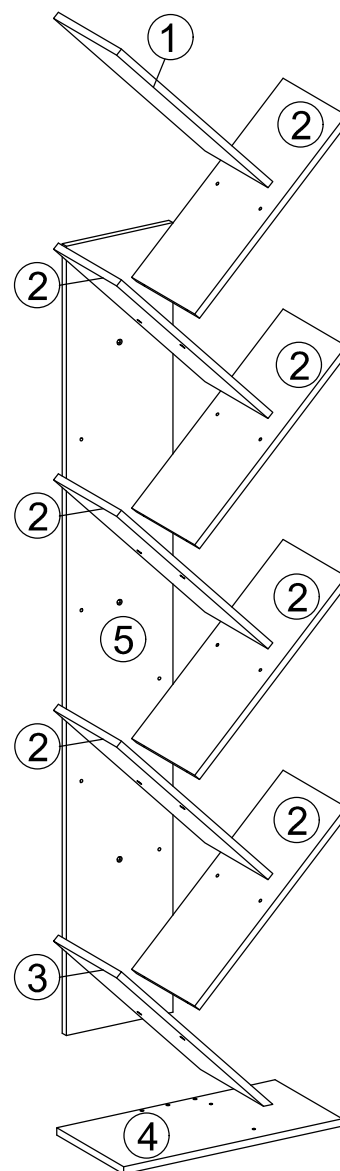
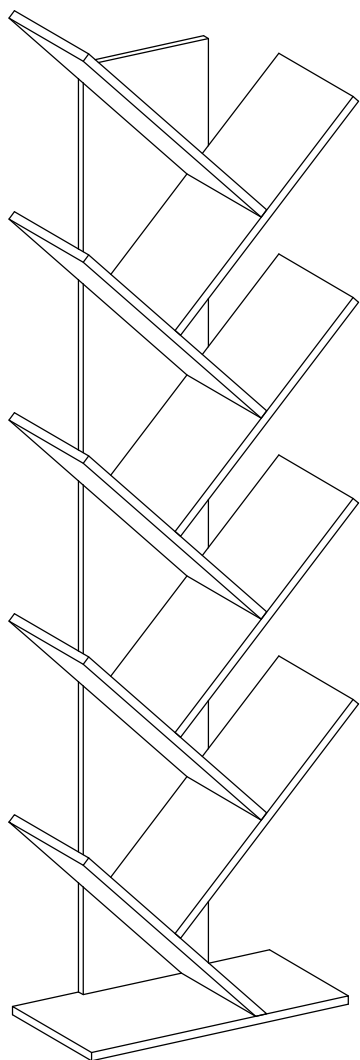






BAKI NEW TYP1


TPK4020142

Montážny návod




<p>A</p>  <p>x31ks</p>	<p>B</p>  <p>x1ks</p>
<p>C</p>  <p>x3ks</p>	<p>D</p>  <p>x4ks</p>
<p>E</p>  <p>x2ks</p>	<p>F</p>  <p>x19ks</p>


Krok 1

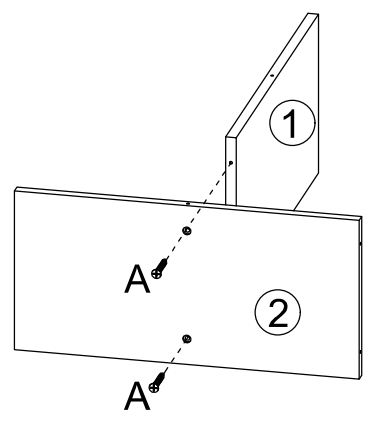


Krok 2

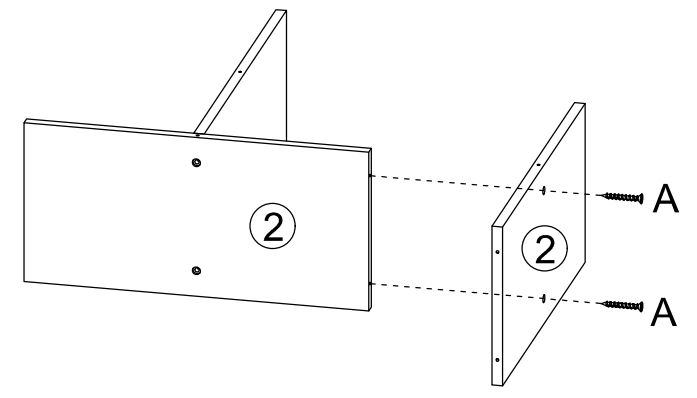


Krok 3

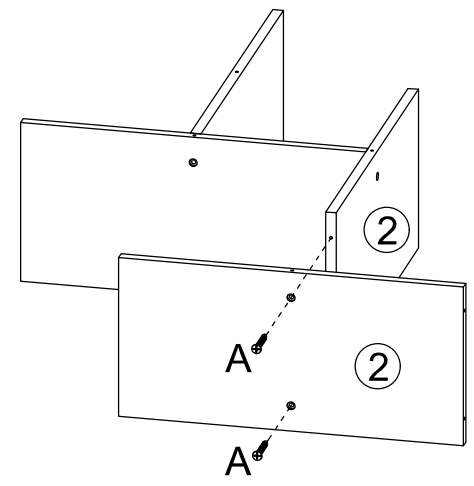


Krok 4

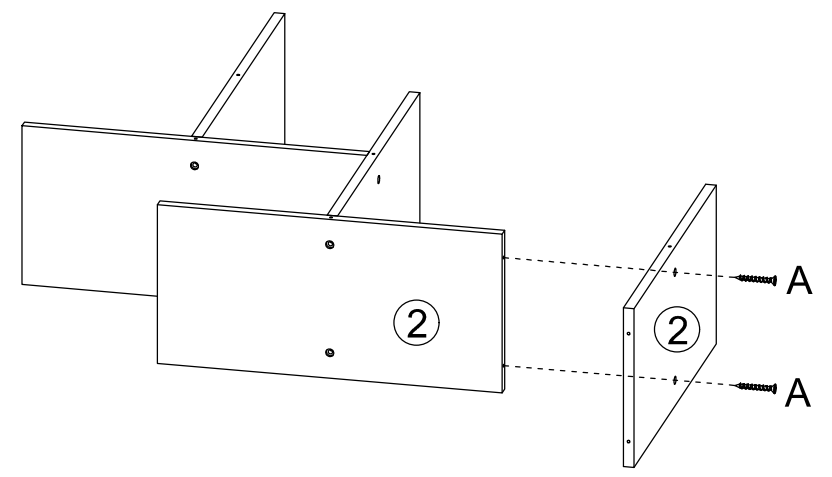


Krok 5

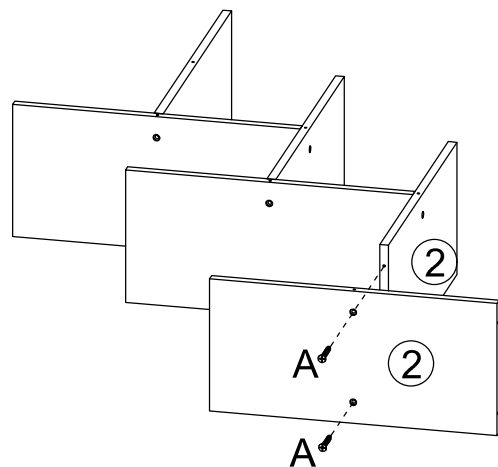


Krok 6

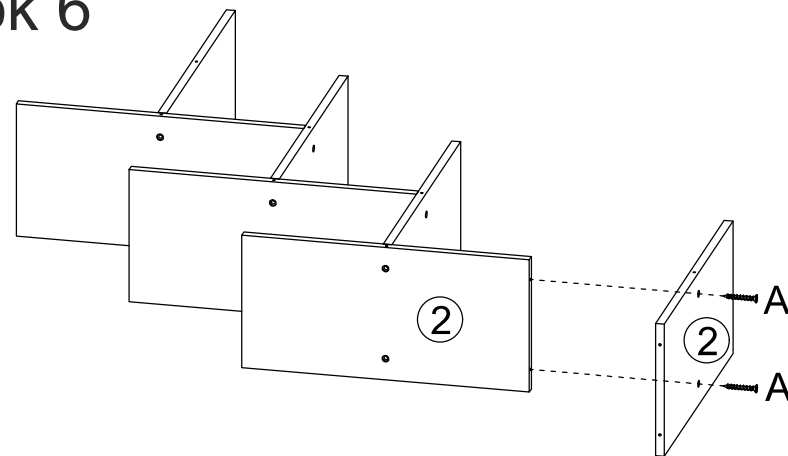


Krok 7

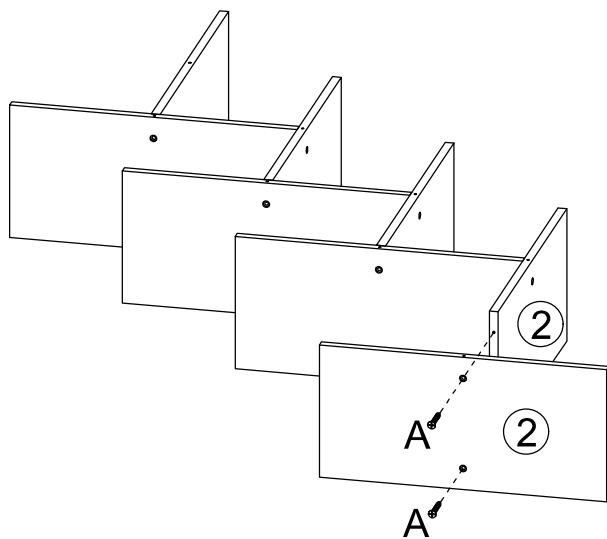


Krok 8

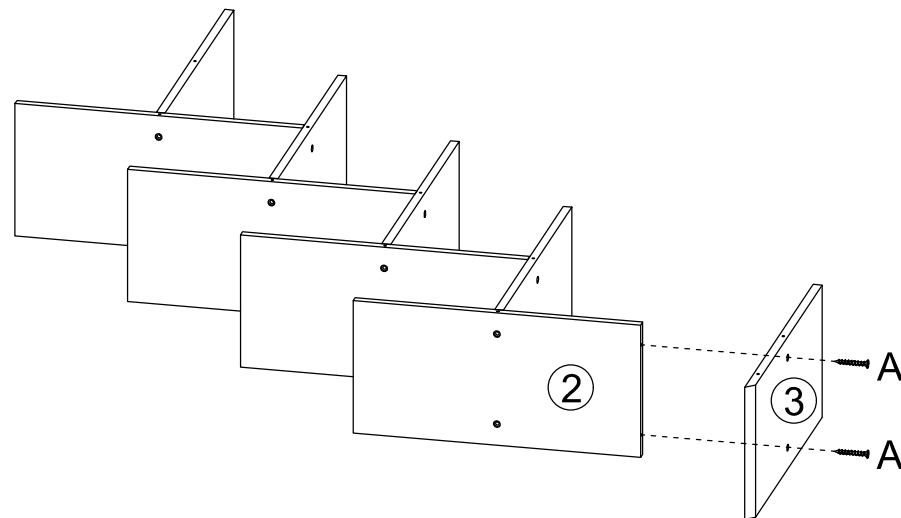


Krok 9

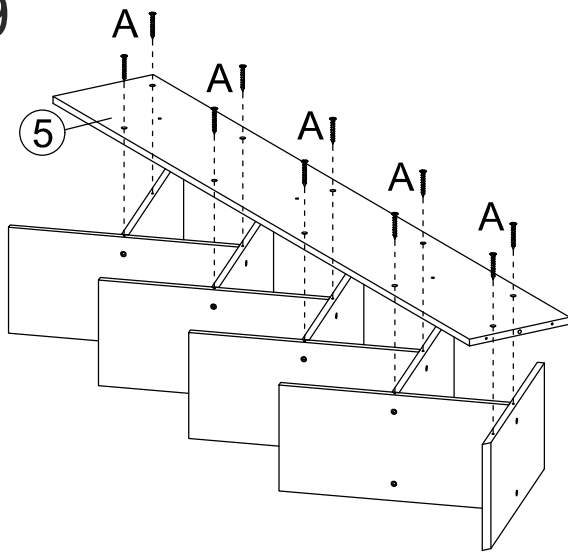


Krok 10

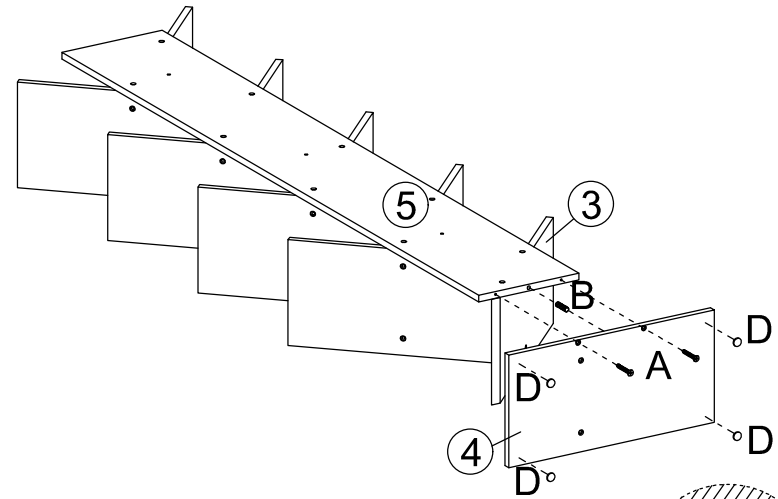

Krok 11

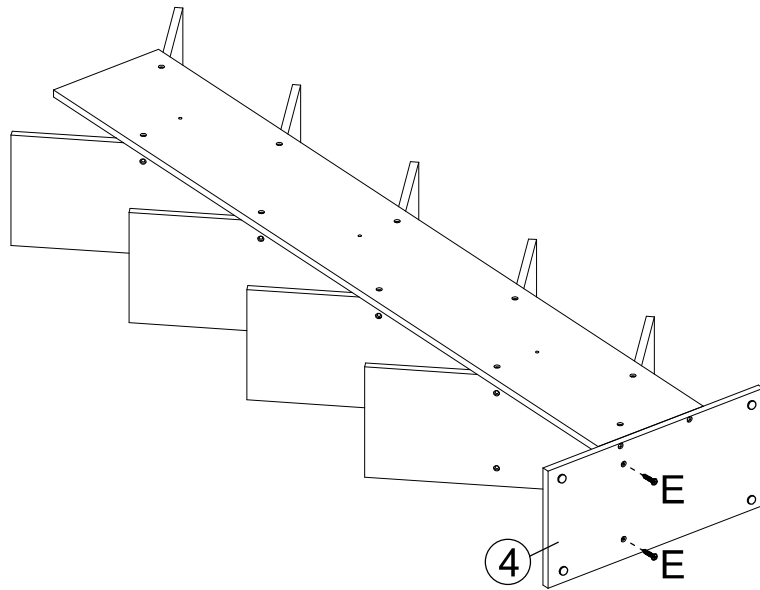

Krok 12

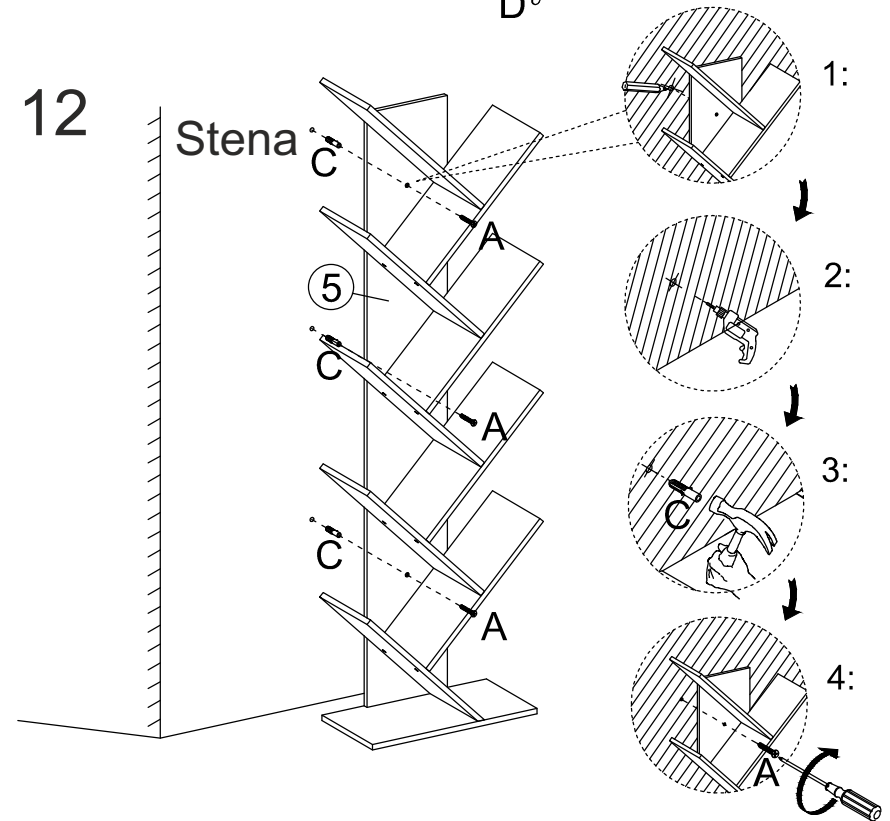

Krok 13

