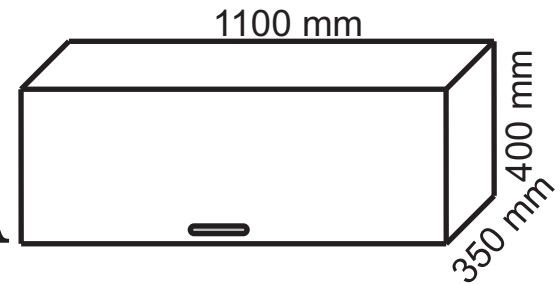


# FISA DE MONTAJ

## Lv3. SUSPENDAT CU O USA



### PASUL 1:

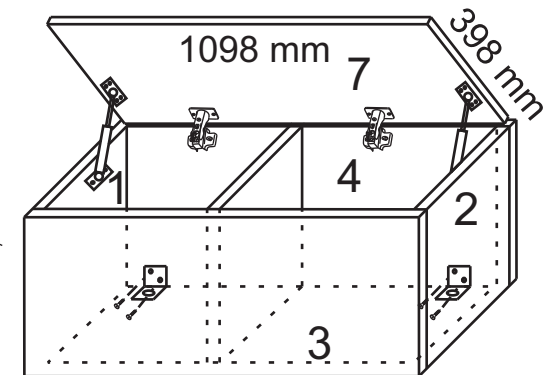
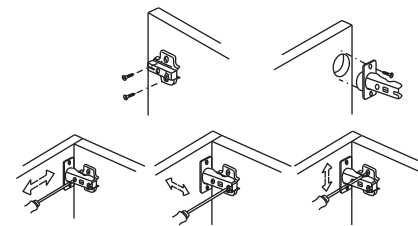
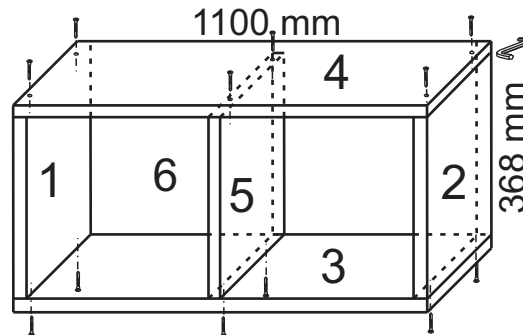
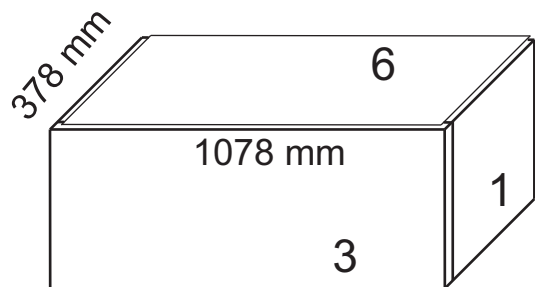
Se prind cele doua laterale (1) si (2) si separatorul (5) de capacul (3) in gaurile existente, folosind eurosuruburi si cheia imbus. Apoi se aseaza spatele (6) din PFL in canalele existente pe laterale si separator.

### PASUL 2:











Se prinde apoi si capacul (4) de laterale si separator tot prin eurosuruburi. Se prinde manerul de usa (7) folosind suruburile M4x20.

### PASUL 3:

Se prind balamalele de usa si contrele de capacul superior (4), se realizeaza ansamblul balama-contrabalama reglandu-se usa, iar apoi se prind pistoanele de usa si laterale (1,2) conform instructiunilor de montare ale pistonului. Se prind coltarii agatatori de capacul (4) prin holsuruburi 3.5x16 apoi se fixeaza corpul de perete.



### ACCESORII

Balama aplicate	Balama semiaplicata	Eurosurub	Holsurub	Coltar agatator	Tinte	Maner	Surub	Piston gaz	Cheie imbus
									
Buc. x 2	x 0	x 12	3,5 x 16 x 12	x 2	x 0	x 1	M4 x 20 x 2	x 2	x 1